BALANCED ZERO REGULATORS - ZEROGOVERNOR DIN BZR-DIN SERIES

FEATURES

DIN-DVGW register number: 89.01c305 & 89.04c305

Max. operating pressure:
Max. differential pressure:
Max. operating temperature:
Max. operating temperature:

• Turndown range: 100:1

• Sensitivity: 0.1 mbar

 Accuracy: low flow: ±0.25 mbar full flow: ±0.76 mbar



APPLICATIONS

- Gas regulation on venturi mixers.
- Gas regulation on proportional mixers.
- Gas regulation on supply lines of any kind.

DESCRIPTION

Zero Regulators are meant to decrease fluid pressure to equal air pressure. They are double diaphragm Regulators. The first diaphragm, also called balancing diaphragm, is meant to divide the inlet gas chamber of the valve from the chamber under the main diaphragm; the second diaphragm balances out the outlet pressure of the lower chamber of the diaphragm itself and the pressure in the top chamber.

A compression spring loads the main diaphragm with an adjustable force which places the valve in an open position. When the outlet pressure under the main diaphragm equals the spring load, a balance of forces occurs to move the diaphragm and the valve assembly towards the closed position. The seal diaphragm is designed so that its area equals the effective area of the valve disc. Fluctuations in inlet pressure are thus counter-balanced by these two equal areas.

The upper diaphragm chamber is normally open to atmosphere while the lower diaphragm chamber, by means of the impulse connection, is subject to outlet pressure. With equal pressures in both chambers the valve stays closed; when there is an unbalance between the pressures of the lower and upper chambers (positive pressure in the upper chamber due to the charge or negative in the lower chamber due to the suction of a Venturi mixer) the valve moves downward letting more gas flow into the system. As changes in flow are required by the connected system, there will be slight changes in the outlet pressure and a minor unbalance in forces on the main diaphragm. This large sensitive diaphragm will move either up or down, as required to restore the force balance.

The flow across the patented compensator produces a velocity condition which is proportional to flow. The impulse when combined with the outlet pressure is transmitted to the lower diaphragm chamber and automatically adjusts the valve to hold a constant delivery pressure.

The patented regulator assures highest accuracy over flow range. With no friction between sensitively counterbalanced parts, fast, positive response is assured. The BZR regulators guarantee dependable, precise gas flow control on all types of combustion systems.



INSTALLATION

All BZR regulators are tested, set and sealed when shipped. If adjustment or repair is necessary, the regulator should be returned to the factory.


Regulators must always be mounted in a stem-up position, in a horizontal line. Any other mounting position will cause a malfunction. The arrow cast on the side of the valve body indicates direction flow.

Regulators should not be installed in areas where operating temperatures will exceed the maximum operating value.

One Zero Regulator may supply more than one burner, provided that some conditions are respected:


- 1. locate a valve between the BZR and every burner;
- 2. respect the maximum limit capacities of the BZR;
- 3. all the mixers connected to one single regulator must be in the same control area.

CAPACITY TABLE

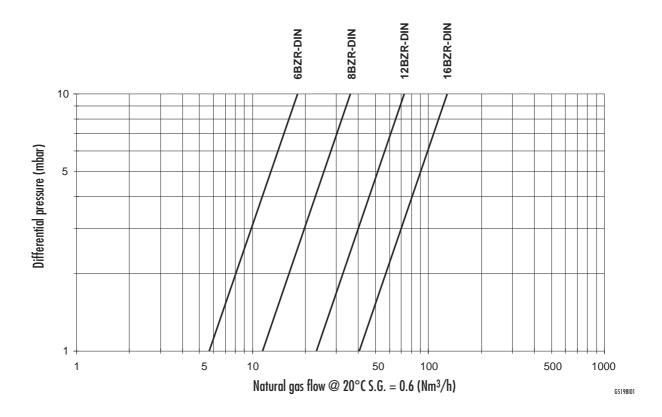



DIMENSIONS

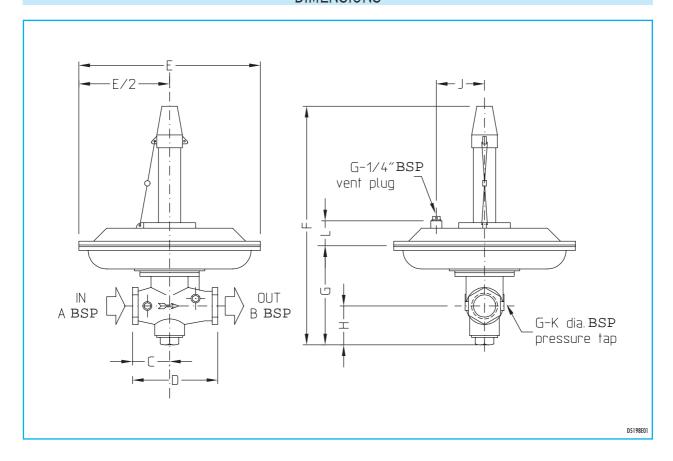

Catalog no.	ø In BSP	ø Out BSP	C mm	D mm	E mm	F mm	G mm	H mm	J mm	K BSP	L mm	Weight kg
6 BZR	3/4"	3/4"	63	127	210	286	120	48	70	1/8"	32	3
8 BZR	1"	1"	60	120	248	298	120	51	86	1/8"	32	4
12 BZR	1.1/2"	1.1/2"	76	165	298	403	184	83	98	1/4"	35	7
16 BZR	2"	2"	92	194	298	406	194	92	98	1/4"	35	9

